

## CONTOARE MANUALE



<b>Tip contor:</b>	mecanic, manual
<b>Dimensiuni carcasa:</b>	Ø45 x 30 mm
<b>Dimensiune soclu:</b>	Ø53 mm
<b>Mod stergere:</b>	manual
<b>Interval citire:</b>	33 x 22 mm
<b>Sursa de alimentare:</b>	230VAC
<b>Interval citire:</b>	99999
<b>Valoarea masurata:</b>	impulsuri mecanice
<b>Tip ecran:</b>	indicator mecanic

**Simbol:** LR

**Descriere articol:** Contor manual pt.montare pe suprafata de lucru SLD-106